




Wariant LEWY  
Variant L

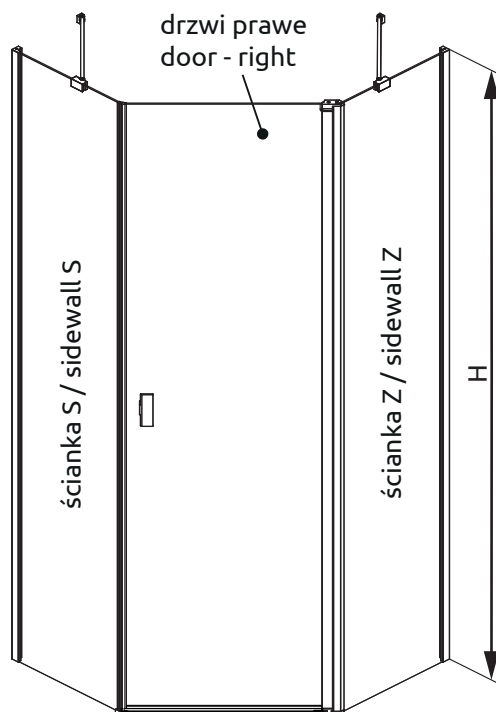


Wariant PRAWY  
Variant R

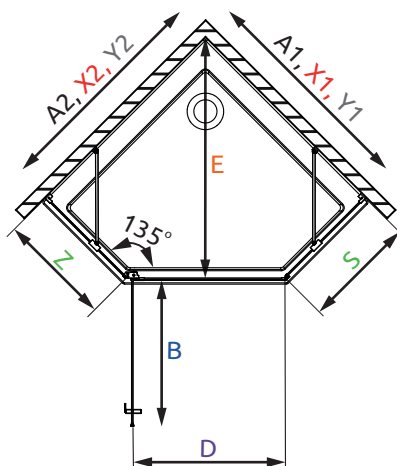

Wariant LEWY / Variant L

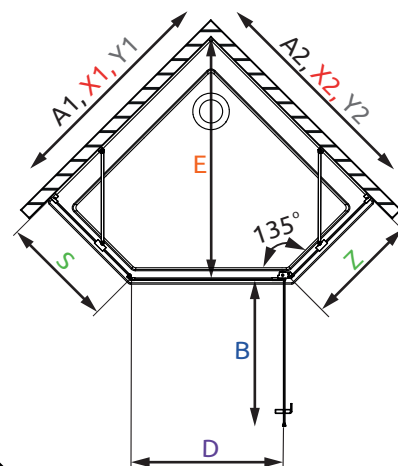

Wariant PRAWY / Variant R

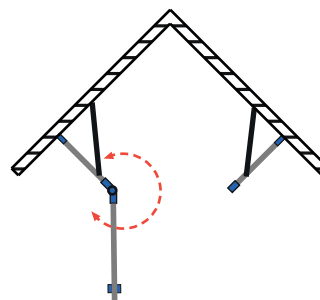

Model	A1	A2	X1	X2	Y1	Y2	B	Z	S	D	E	H
PTJ 80Zx80S	800	800	775-790	775-790	770-785	770-785	577	332-347	334-349	570	772-793	2000
PTJ 80Zx90S	800	900	775-790	875-890	770-785	870-885	577	332-347	434-449	570	842-863	2000
PTJ 80Zx100S	800	1000	775-790	975-990	770-785	970-985	577	332-347	535-549	570	913-934	2000
PTJ 90Zx80S	900	800	875-890	775-790	870-885	770-785	577	432-447	334-349	570	842-863	2000
PTJ 90Zx90S	900	900	875-890	885-900	870-885	867-882	577	432-447	434-449	570	913-934	2000
PTJ 90Zx100S	900	1000	875-890	975-990	870-885	970-985	577	432-447	535-549	570	984-1005	2000
PTJ 100Zx80S	1000	800	975-990	775-790	970-985	770-785	577	532-547	334-349	570	913-934	2000
PTJ 100Zx90S	1000	900	975-990	875-890	970-985	870-885	577	532-547	434-449	570	984-1005	2000
PTJ 100Zx100S	1000	1000	975-990	975-990	970-985	970-985	577	532-547	535-549	570	1054-1075	2000