



ARTA KDD I

<i>Arta KDD I</i>	A1	A2	X1	X2	Y1	Y2	B1	B2	D	H
<i>KDD I 80Lx80R</i>	800	800	788-794	788-794	769-775	769-775	718	718	1117	2000
<i>KDD I 90Lx80R</i>	900	800	888-894	788-794	869-875	769-775	818	718	1190	2000
<i>KDD I 80Lx90R</i>	800	900	788-794	888-894	769-775	869-875	718	818	1190	2000
<i>KDD I 90Lx90R</i>	900	900	888-894	888-894	869-875	869-875	818	818	1258	2000
<i>KDD I 100Lx80R</i>	1000	800	988-994	788-794	969-975	769-775	918	718	1266	2000
<i>KDD I 80Lx100R</i>	800	1000	788-794	988-994	769-775	969-975	718	918	1266	2000
<i>KDD I 100Lx90R</i>	1000	900	988-994	888-894	969-975	869-875	918	818	1331	2000
<i>KDD I 90Lx100R</i>	900	1000	888-894	988-994	869-875	969-975	818	918	1331	2000
<i>KDD I 100Lx100R</i>	1000	1000	988-994	988-994	969-975	969-975	918	918	1400	2000

